

Slide and Fold


Fitting a Trickle Vent

Internal

1. Place the unit to the internal side of the door centrally over the routed slot in the frame; this has the section that can be opened.
2. The unit can be mounted so as to deflect the airflow upwards or downwards, we recommend mounting the unit to deflect the air upwards.
3. Whilst holding the unit in position, mark the frame through the screw hole in the unit with a pencil or similar marker. Remove the unit and drill a suitable pilot hole for the screws.
4. Fix the unit to the frame using the screws supplied.
5. Once fixed, slide the end caps over the ends of the unit to cover the screws.

External

1. The external hood is supplied with two sets of end caps depending on whether a slim unit is required or a unit with narrow height (see below)

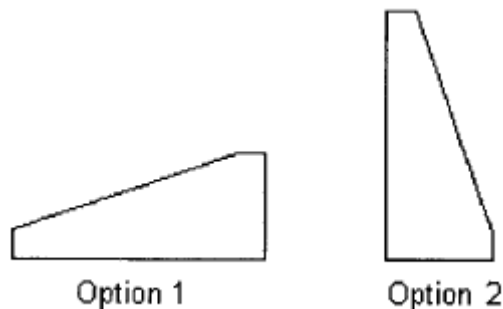

The unit comes supplied as Option 1, if Option 2 is required then simply unclip the Option 1 end plates and replace them with the Option 2 end plates supplied in the bag.

2. Once the end plate option has been selected, position the unit centrally over the routed slot and mark through the screw holes with a pencil or similar marker. Remove the unit and drill a suitable pilot hole for the screws.
3. Fix the unit on to the frame using the screws provided.
4. Once the unit is fixed into place, press the plastic screw covers into position to cover the screws.

www.slideandfold.co.uk

82 Carriers Close, Canley, Coventry, CV4 8AW
Telephone: 024 76 694 162 Fax: 024 76 461 977

Directors: E.A.Cooke D.P.Cooke Registered in England 05956755